

The following steps will show the simplest installation method while ensuring the maximum thermal performance for your project.

This guide shows how Foilboard panels are installed, after the inner brick wall has been constructed, using the brick-ties to hold them in place inside the wall cavity.

ACCESSORIES




Foilboard Green Joining Tape




Foilboard Spacer Blocks




INSTALLATION

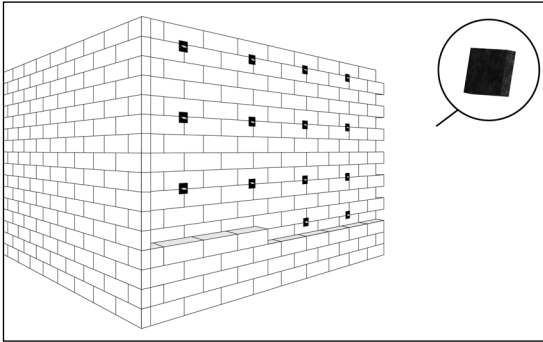


STEP 1 Install Foilboard spacer blocks by pushing a block onto each brick-tie as shown.

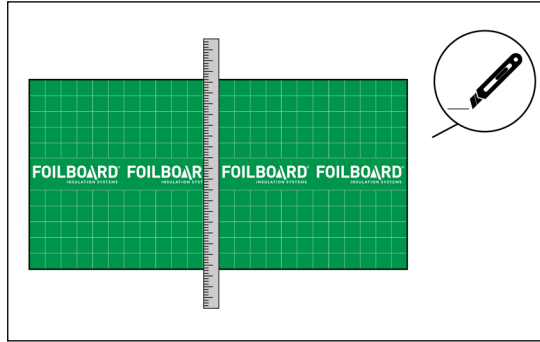


STEP 2 Use full size sheets where possible. For smaller sections, measure the required area and cut with a straight edge for precision.

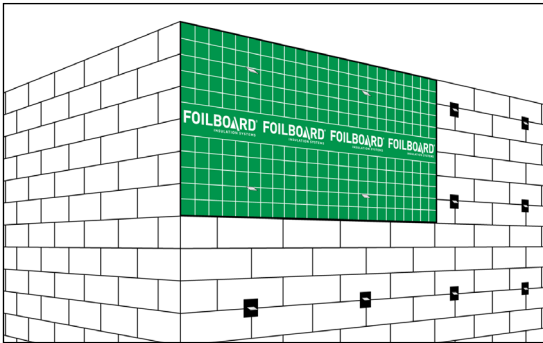

STEP 3 Gently press the Foilboard panel onto the brick-ties, so they leave a mark showing their position.

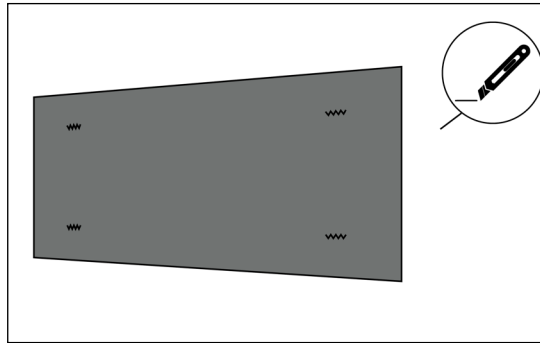

STEP 4 Cut a slot where each brick-tie marked the Foilboard panel. Then push the panel onto the brick ties until they meet the spacer blocks.

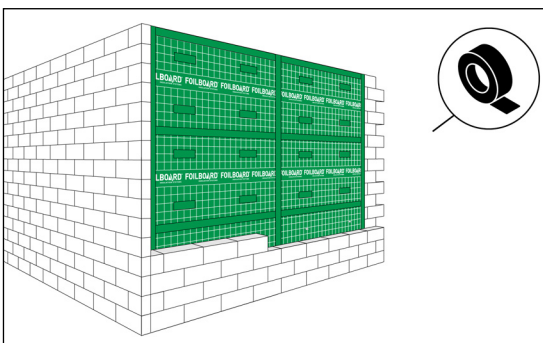

STEP 5 Tape any joins or gaps using Foilboard green joining tape.

PRO TIPS

- Install Foilboard panels to the inner skin of the brickwork using the brick-ties. Once installed, outer skin of the brickwork may be finished.
- Tape around the brick-ties to maximise thermal performance.
- Start with full panels in the largest areas, then fill in smaller areas with smaller off-cuts to minimise wastage.
- Start from the top of the build and work your way down.

INFORMATION LINE
1800 354 717

www.foilboard.com.au

